

S STYLE

Model S single-tube flow meters pictured on this page are similar to P meters in design, employing the same interchangeable flow tubes, valves and accessories. Likewise they may be panel or bench mounted.





BUILT-IN VALVES


Meters are available with built-in needle valves (CVTM), high precision metering valves (MFVTM) with "non-rising stems", or with no valves. The higher cost of MFVTM valves is justified whenever high sensitivity control and resolution are desirable particularly in conjunction with metering tubes of very low flow rates. Generally, for gas metering it is recommended that valves are positioned at inlets (bottom) for liquids valves may be positioned either at inlets or outlets (top). For vacuum services, valves must be mounted at outlets. If unspecified at the time of ordering, meters will be shipped with valves mounted at the inlets.

| SPECIFICATIONS | | | |
|----------------------------------------------------------------------|---------------------------------------------|--|--|
| STANDARD ACCURACY | ±2% FS mm scales except 042 and 032 flow | | |
| | tubes. ±5% FS direct reading scales and 042 | | |
| | and 032 flow tubes. | | |
| CALIBRATED ACCURACY ±1% FS optional. | | | |
| REPEATABILITY | ±0.25%. | | |
| USEFUL FLOW RANGE | 10:1 minimum with one float. | | |
| Better than 20:1 with combination of two floats installed in meters. | | | |
| MAXIMUM OPERATING TEMPERATURE | | | |
| 200 psig/13.8 bars. | | | |
| MAXIMUM OPERATING TEMPERATURE | | | |
| | 250 °F/ 121 °C. | | |


| **MATERIALS OF CONSTRUCTION | | |
|------------------------------------------------------|---------------------------------------------------------|--|
| FLOW TUBES | Heavy walled borosilicate glass. | |
| FLOATS | Glass, Sapphire, 316 Stainless Steel, Carboloy® | |
| | and Tantalum. | |
| CHOICE OF MOUNTING FITTINGS IN CONTACT WITH FLUIDS | | |
| | a) Aluminum, black anodized. | |
| | b) Brass, chrome plated. | |
| | c) 316 stainless steel. | |
| SIDE PANELS | Aluminum, black anodized. | |
| FRONT SHIELD | Lexan [®] with longitudinal magnifier lens for | |
| | enhanced reading resolution. | |
| BACK PLATE | 1/8" thick white acrylics. | |
| O-RINGS AND PACKING Buna® o-rings in aluminum model. | | |
| | FKM o-rings in stainless steel meters. | |
| | OPTIONAL FKM, PTFE/FFKM and EPR. | |
| CONNECTIONS | 1/8" NPT female inlet and outlet connections. | |
| OPTIONAL | 1/4" FNPT, hose and compression fittings are available. | |

**The selection of materials of construction, is the responsibility of the customer. The company accepts no liability.

| DIMENSIONS FOR S STYLE METERS | | | |
|-------------------------------|------------|----------------------|--|
| SCALE LENGTH | ALL METERS | | |
| (A) | HEIGHT (H) | CENTER TO CENTER (D) | |
| 65mm | 6.156 | 5.156 | |
| 150mm | 10.46 | 9.469 | |

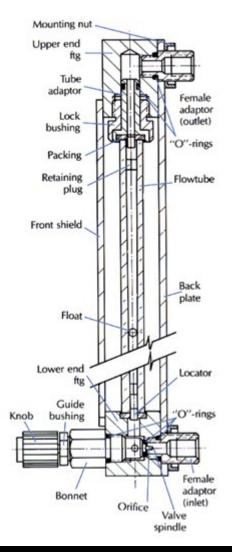


DIMENSIONS

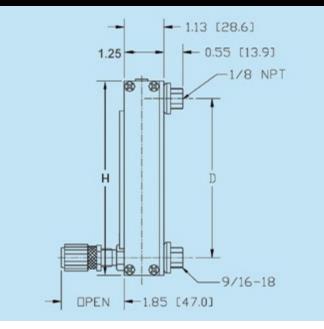

NOTE: Aalborg* reserves the right to change designs and dimensions at its sole discretion at any time without notice. For certified dimensions please contact Aalborg*.



Configure and Order Online: Model S Single Tube Flow Meters

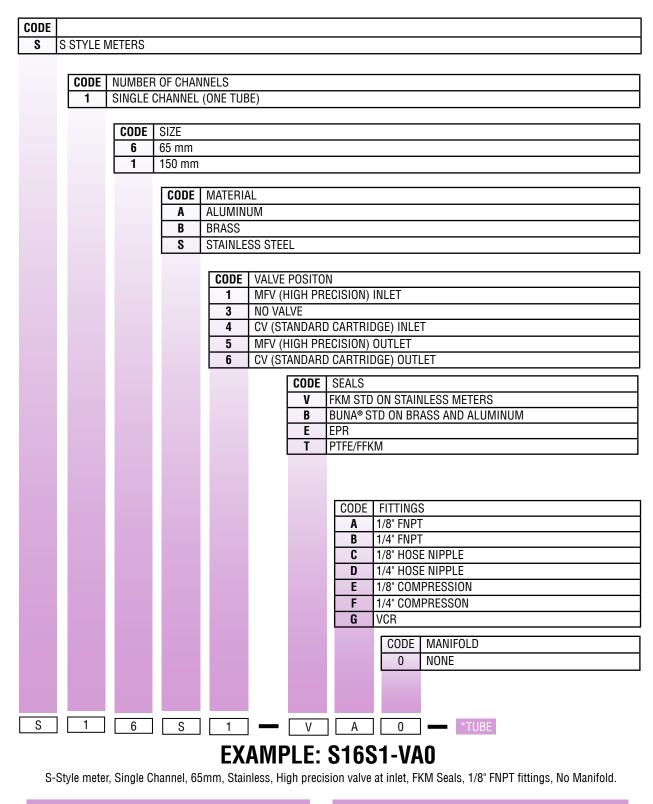

Optional Accessories

TP1-Tripod for single channel meter.

Tube selection:

Millimeter tubes: Tables 6 thru 9 Direct Reading tubes: Tables 11 thru 22.