FOR LIQUIDS ONLY



PLEASE NOTE: POWER CORD WITH MALE PLUG IS NOT INCLUDED. ORDER SEPARATELY: CAT NO. CBL-PWE

Design Features

- Jewel bearings allow for very low minimum flow rates.
- Multi-Parameter: Flow and optional temperature measurements.
- Polypropylene and chemically resistant PVDF models.
- Supports up to 29 Engineering Units (including User Defined).
- Two programmable Totalizers and Flow Pulse output (3.3Vdc CMOS).
- Programmable High/Low Flow and optional Temperature Alarms with preset action delay interval.
- Two sets of user-programmable optically isolated outputs.
- User-selectable (via jumpers) analog 0-5 Vdc or 4-20mA flow and optional temperature outputs.
- RS-232 or RS-485 Digital Interface with Multi-Drop Capability of up to 256 units (RS-485 option).
- Local keypad and 2x16 characters LCD display with adjustable back light (optional).
- Enclosure weather tight to IP65 standards.
- Free communication software with temperature and flow data log-in capability.

General Description

PWE flow meters support various functions including: two independently programmable flow totalizers, user programmable low, high or range flow and temperature alarm, two sets of user programmable optically isolated outputs, self diagnostic alarm, flow pulse output.

The flow rate can be displayed in 29 different volumetric or mass flow engineering units. Flow meter parameters and functions can be programmed locally via optional keypad and LCD^{\dagger} or remotely via the RS-232/RS-485 interface.

Optional local 2x16 LCD[†] readout with adjustable back light provides flow rate, temperature[†], total volume reading in currently selected engineering units, diagnostic events indication and feature a password protected access to the process parameters to ensure against tampering or resetting.

(† - optional feature)

Principles of Operation

Liquid flowing through the unit causes the paddle wheel to spin. As the magnets embedded in the paddle spin past the sensor, electrical pulses are produced in which frequency is proportional to the flow rate. The number of pulses per desired time interval and the K-factor (number of pulses/gallon) make it is possible to calculate the flow rate and volume passing through the unit.

On board CPU and signal conditioner circuitry perform accurate flow and total computation, digital communication and analog 0-5 Vdc or 4-20 mA output signals. Non-volatile memory stores all hardware specific and user programmable variables, including flow linearization table.

Totalizer

The total volume of the liquid is calculated by integrating the actual liquid flow rate with respect to time. The optional LCD/keypad and digital interface commands are provided to:

- set the totalizer to ZERO
- start the totalizer at a preset flow
- assign action at a preset total volume
- start/stop totalizing the flow
- read totalizer

Totalizer conditions become true, when the totalizer reading and the "Stop at Total" volumes are equal. Main Totalizer reading is stored in the non volatile memory (EEPROM). The pilot Totalizer reading is stored in volatile memory (SRAM) and will be lost if flow meter is powered down.

Engineering Units

TADLE 47 LINITE OF MEASUDE

The measured flow and associated totalizer data are scaled directly in engineering units via the digital interface.

THE FOLLOWING 29 UNITS OF MEASURE ARE SUPPORTED:

TABLE 47 - UNITS OF MEASURE				
NUMBER	INDEX	FLOW RATE Engineering Units	TOTALIZER Engineering Units	DESCRIPTION
1	0	%	%s	percent of full scale
2	1	mL/s	mL	milliliter per second
3	2	mL/min	mL	milliliter per minute
4	3	mL/h	mL	milliliter per hour
5	4	l/s	ltr	liter per second
6	5	l/min	ltr	liter per minute
7	6	l/h	ltr	liter per hour
8	7	m3/s	m3	cubic meter per second
9	8	m3/min	m3	cubic meter per minute
10	9	m3/h	m3	cubic meter per hour
11	10	ft3/s	ft3	cubic feet per second
12	11	ft3/min	ft3	cubic feet per minute
13	12	ft3/h	ft3	cubic feet per hour
14	13	gal/s	gal	gal per second
15	14	gal/min	gal	gal per minute
16	15	gal/h	gal	gal per hour
17	16	g/s	g	grams per second
18	17	g/min	g	grams per minute
19	18	g/h	g	grams per hour
20	19	kg/s	kg	kilograms per second
21	20	kg/min	kg	kilograms per minute
22	21	kg/h	kg	kilograms per hour
23	22	lb/s	lb	pounds per second
24	23	lb/min	lb	pounds per minute
25	24	lb/h	lb	pounds per hour
26	25	t/s	ton	ton (metric) per sec
27	26	t/min	ton	ton (metric) per minute
28	27	t/h	ton	ton (metric) per hour
29	28	User	UD	user defined

83 WWW.AALBORG.COM ● E-MAIL ⊠ INFO@AALBORG.COM ● PHONE 🕿 845.770.3000 ● TOLL FREE IN U.S.A. AND CANADA 1.800.866.3837 ● ORANGEBURG N.Y. U.S.A.



Flow and Temperature[†] Alarms

High and Low flow ALARM limits can be preprogrammed via digital interface or optional LCD/Keypad. ALARM conditions become true when the current reading is equal or higher/lower than corresponding values of high and low alarm levels. Alarm action can be assigned with preset delay interval (0-3600seconds) to activate the optically isolated output (separate for High and Low alarm). Latch Mode control feature allows each optical output to be latched on or follow the corresponding alarm status.

(+- optional feature)

Optically Isolated Outputs

Two sets of optically isolated outputs are provided to actuate user supplied equipment. These are programmable via digital interface or optional LCD/Keypad such that the outputs can be made to switch when a specified event occurs (e.g. when a low or high flow alarm limit is exceeded or when the totalizer reaches a specified value) or may be directly controlled by user.

TABLE 48 - FLOW RATE FOR PWE

Meter	Flow Ra	ite H2O	Inlet/Outlet	Max Pressure Drop	
Sizes	[L/min]	[gal/min]	Ports Female NPT	Bar	PSI
PWE4	0.15-18.9	0.04-5	3/8"	1	15
PWE6	0.3-37.6	0.08-10	1/2"	1.4	20
PWE8	0.6-64.4	0.15-17	3/4"	1.4	20
PWE10	1.3-132.5	0.35-35	1"	1.4	20

TABLE 49 - **MATERIALS IN FLUID CONTACT

	POLYPROPYLENE MODELS	PVDF MODELS	
BODY	Polypropylene	PVDF	
LID	Acrylic	PVDF	
PADDLE WHEEL	PVDF	PVDF	
SHAFT	Nickel Tungsten Carbide	Zirconia Ceramic	
BEARINGS	Sapphire Jewels	Sapphire Jewels	
0-RINGS	EPDM	PTFE	
PLATINUM RTD	316 stainless steel casing	316 stainless steel casing	

**The selection of materials of construction, is the responsibility of the customer. The company accepts no liability.

TABLE 50 - DIGITAL PADDLE WHEEL FLOW METER ACCESSORIES		
MODEL NO.	DESCRIPTION	
CBL-PWE	Cable 12 Pins stripped end 6 foot shielded	
PS-PWE-110NA-2	Power Supply PWE 110 Vac North American Plug	
PS-PWE-230EU-2	Power Supply PWE 230 Vac Continental Plug	
PS-PWE-240AU-2	Power Supply PWE 240 Vac Australian Plug	
PS-PWE-240UK-2	Power Supply PWE 240 Vac UK Plug	

TABLE 51 - DIGITAL PADDLE WHEEL METER FEATURES FOR POLYPROPYLENE MODELS

NO KEYPAD & LCD - No RTD	WITH RTD - No keypad & LCD	KEYPAD & LCD - No RTD	KEYPAD & LCD - RTD
PWE04P(*)NN	PWE04P(*)NR	PWE04P <mark>(*)</mark> LN	PWE04P(*)LR
PWE06P(*)NN	PWE06P(*)NR	PWE06P <mark>(*)</mark> LN	PWE06P(*)LR
PWE08P(*)NN	PWE08P(*)NR	PWE08P <mark>(*)</mark> LN	PWE08P(*)LR
PWE10P(*)NN	PWE10P(*)NR	PWE10P <mark>(*)</mark> LN	PWE10P(*)LR

NO KEYPAD & LCD - No RTD	WITH RTD - No Keypad & LCD	KEYPAD & LCD - No RTD	KEYPAD & LCD - RTD
PWE04T(*)NN	PWE04T(*)NR	PWE04T(*)LN	PWE04T(*)LR
PWE06T(*)NN	PWE06T(*)NR	PWE06T(*)LN	PWE06T(*)LR
PWE08T(*)NN	PWE08T(*)NR	PWE08T(*)LN	PWE08T(*)LR
PWE10T(*)NN	PWE10T(*)NR	PWE10T(*)LN	PWE10T(*)LR

(*) FOR COMPLETE MODEL NUMBERS SEE PAGE 86.

WWW.AALBORG.COM ● E-MAIL ⊠ INFO@AALBORG.COM ● PHONE ☎ 845.770.3000 ● TOLL FREE IN U.S.A. AND CANADA 1.800.866.3837 ● ORANGEBURG N.Y. U.S.A. 84


TABLE 53 - SPECIFICATIONS FOR PWE

TABLE 53 - SPECIFICATIONS FUR PWE			
FLOW MEDIUM:	Please note that PWE Flow Meters are designed to work only with liquids. Never try to measure flow rates of dry gas.		
CALIBRATIONS:	Performed at standard conditions [14.7 psia (101.4 kPa) and 70 °F (21.1 °C)] unless otherwise requested or stated.		
VISCOSITY:	Calibrated to 1 cSt (water) meters with display can be used for liquids up to 50 cSt with field calibration (maximum flow range may be affected).		
ENVIRONMENTAL (PER IEC 664):	Installation Level II; Pollution Degree II.		
FLOW ACCURACY (INCLUDING LINEARITY):	±1% of FS.		
REPEATABILITY:	±0.25% of full scale.		
LIQUID TEMPERATURE MEASUREMENT RANGE ⁺ :	34 °F to 140 °F (1 °C to 60 °C).		
TEMPERATURE ACCURACY (INCLUDING LINEARITY) [†] :	±0.5 °C.		
FLOW RESPONSE TIME:	Approximately 1 seconds (above 10% of full scale flow), approximately 2 seconds (below 10% of full scale flow).		
MAXIMUM PRESSURE:	10 barg (150 psig).		
MAXIMUM PRESSURE DROP:	1.4 bar (20 psi) at 132.5 L/min flow. See table for pressure drops associated with various models and flow rates.		
AMBIENT TEMPERATURE RANGE:	14 °F to 140 °F (-10 °C to 60 °C).		
OUTPUT SIGNALS:	Linear 0-5 Vdc (3000 ohms min load impedance); Linear 4-20 mA (500 ohms maximum loop resistance). Maximum noise 20mV peak to peak (for 0-5 Vdc output).		
FLOW PULSE OUTPUT:	3.3 Vdc amplitude (3000 ohms min load impedance).		
OPTICALLY ISOLATED OUTPUTS:	$\label{eq:UCE} \text{UCE} \leq \ \text{40Vdc}, \ \text{ICE} \leq \ \text{150 mA}.$		
FLOW METER INPUT POWER:	11 to 26 Vdc, 100 mV maximum peak to peak output noise.		
	Power consumption: +12Vdc (150 mA maximum); +24Vdc (100 mA maximum);		
	Circuit board have built-in polarity reversal protection, 300mA resettable fuse provide power input protection.		
COMMUNICATIONS PARAMETERS (RS-232/RS-485):	Baud rate: 9600 baud. Stop bit: 1. Data bits: 8. Parity: None. Flow Control: None.		
ELECTRICAL CONNECTIONS:	Built-in female 12 pin M16, IP67 connector. To be mated with 12 pin M16 male EMI shielded IP67 connector. (Binder-USA P/N: 99-5629-15-12) not included. Optional cable available. Cable including male connector available.		
DISPLAY:	Optional local 2x16 characters LCD with adjustable backlight (2 lines of text).		
KEYPAD:	Optional 4 push button keypad.		
CE COMPLIANT:	EMC Compliance with 89/336/EEC as amended. Emission Standard: EN 55011:1991, Group 1, Class A Immunity Standard: EN 55082-1:1992.		

(† - optional feature)

PWE

Configure and Order Online: PWE Paddle-Wheel Flow Meter

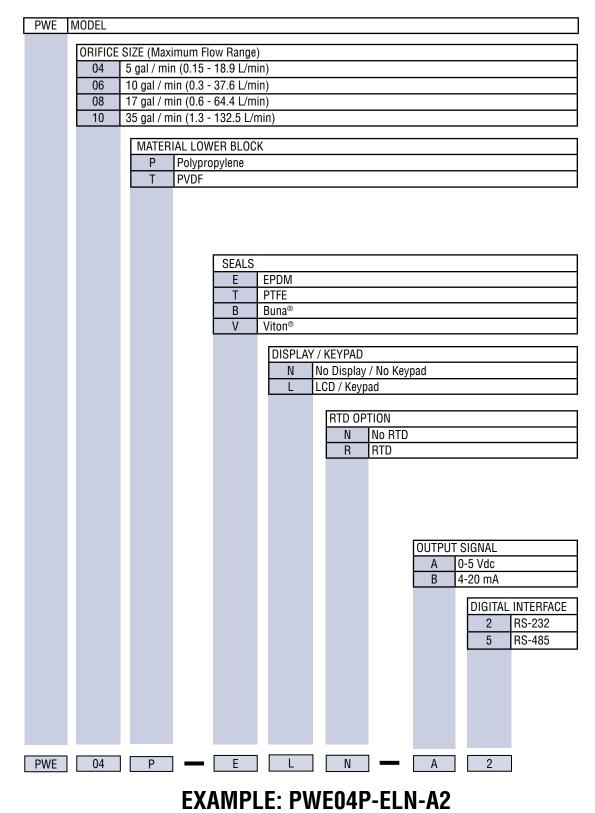

Digital Paddle Wheel Meter, Maximum Flow 5 Gal. per minute, Polypropylene Lower Block, EPDM Seals, LCD Keypad, No RTD, 0-5 Output Signal with RS-232 Digital Interface.